

Stack Chair Depot Chelsea Assembly Instructions

Thank you for selecting Stack Chair Depot for your seating requirements. In a few minutes you will have a high quality piece of furniture that you will enjoy for many years. Please follow the instructions below to assure the proper assembly.

First, confirm that all pieces are included as described here. Unwrap and layout pieces on floor ready to assemble. Estimated time to assemble is 10 minutes.

#1 Chrome base disc



#2 Chrome plated plastic collar



#3 Short Chrome column




#4 Long Chrome column




#5 Footrest ring



#6 Seat with column attached

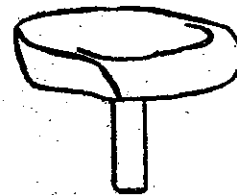

#7 Back rest with chrome support

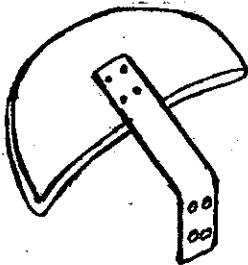


#8 4 bolts, 4 washers and 1 Allen Wrench




Start assembly by placing the disc base #1 on the floor. Center the plastic collar #2 over the hole in the disc. Insert the short column #3 through the plastic disc and into the base. Note: the column has a slight taper at both ends. Either end can go into the base. Next Insert the long column #4 into the top of the short column with the pointed end up. Finally, place the #5 footrest over the top of the long column and move it down until it stops. There is a wider section of the long column that will lock the footrest in place at the correct height.


(over)

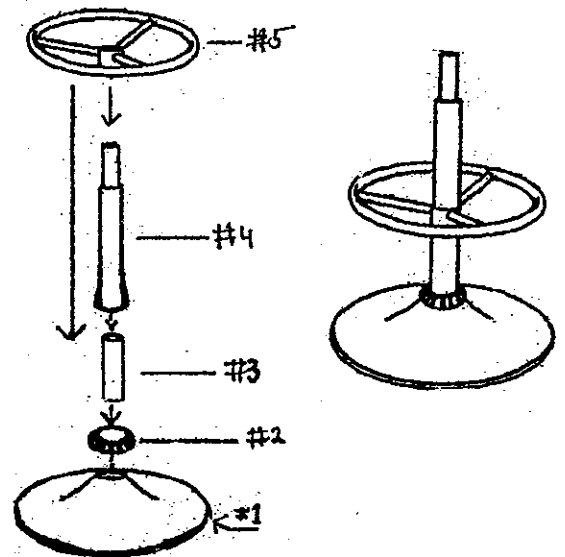

Next, Open bag #8 of bolts, washers and Allen wrench. Place a washer on each bolt and set them close by ready to use. Then set seat with column #6 upside down on floor, preferably on carpet or rug. Place back rest with chrome support #7 so that the 4 holes in the back rest line up with the threaded holes in the bottom of the seat as indicated.

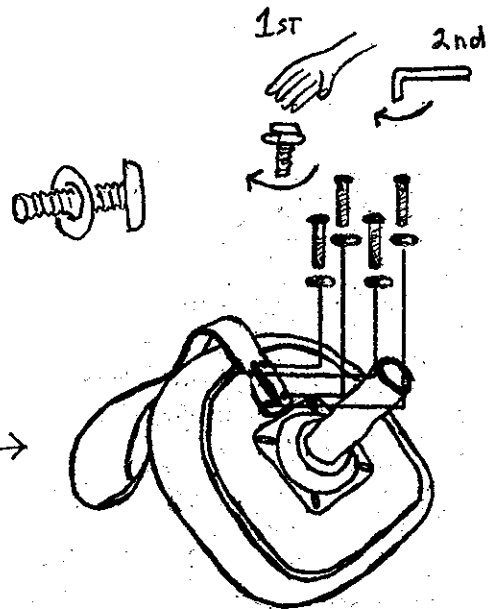

Using hands only begin installing bolts with washers through back rest support into threaded holes in bottom of seat. Check to see that there is no black fabric in holes that could interfere with bolts going in. Turn all four bolts in by hand until you feel pressure. Note: There is a blue substance on the bolt threads to prevent them from working loose once completely tightened. After all 4 bolts are started by hand, tighten down completely using the Allen wrench until the support bracket is firmly seated against the bottom of the seat.

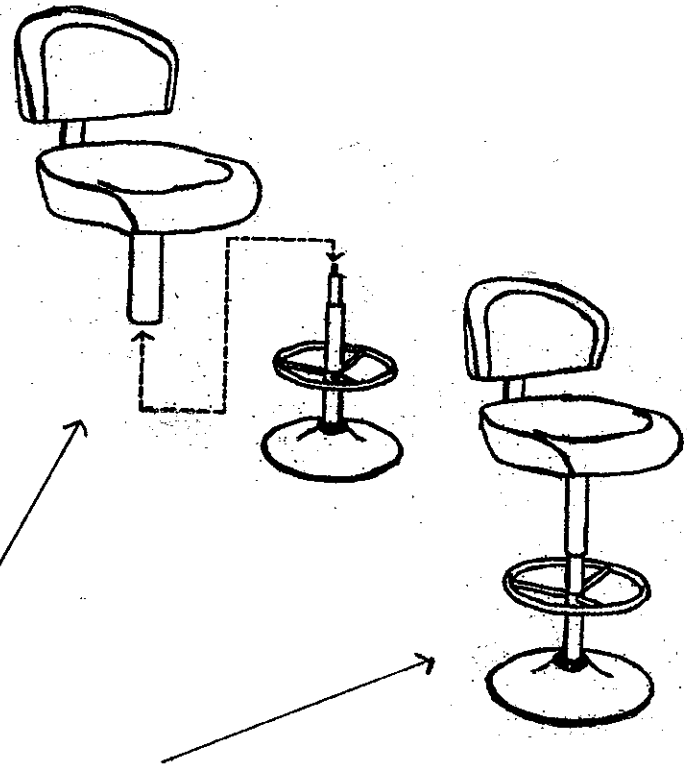

Finally, Turn seat with back upright and place over tip of pointed column on the base. Sit on completed stool carefully. This first pressure will lock all parts into the base system.

Your Chelsea barstool is now assembled and ready to enjoy. It will easily swivel around on the heavy duty chrome base. Spills and food substances should be wiped off the upholstery with a damp cloth as soon as possible.

For your comments or problems call Stack Chair Depot between 8:00 AM and 5:00 PM Eastern Time on business days. *We thank you for your business*